

Fits: Garmin* 2610, 2620, 2650, 2660, 2670, 2720, 2730, 2820



PARTS LIST:

- A. 8" Powerlet/Garmin Cable
- B. Cradle For Garmin
- C. Diamond Base w/ Ball
- D. 1" Ball w/ 3/8" Thread
- E. Double Socket Arm For 1" Ball
- F. Two Bolts
- G. Two Nuts
- H. Fiber Washer


Introduction:

Made in USA

This easy to install, high quality, kit provides a convenient way to mount and power a Garmin GPS* on your Victory motorcycle.


Installation Instructions:

STEP #1 – Remove the mounting hole cover on the Powerbar and install the ball into the 3/8" hole [D&H]. Using the double socket arm [E], tighten the 1" ball into the Powerbar.

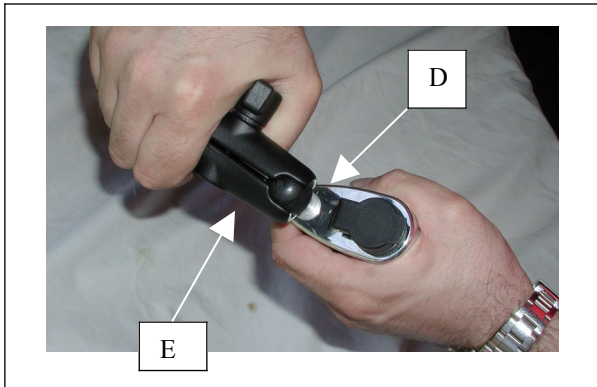

STEP #2 – Attach the diamond base ball mount [C] to the back of the Garmin cradle using the supplied screws & nuts [F & G].

STEP #3 – Loosen the arm enough to slip over both balls [C & D] and position the Garmin cradle.

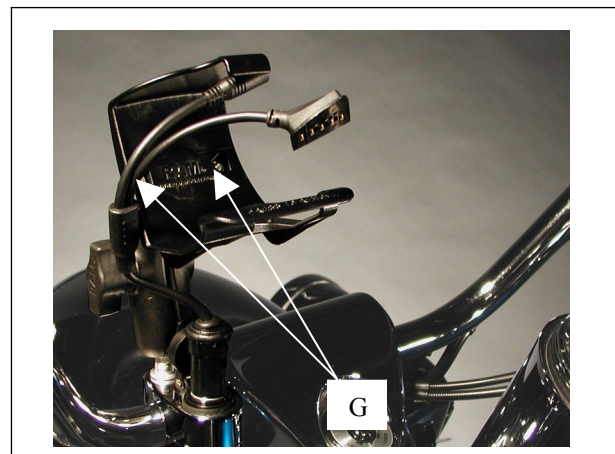

STEP #4 – Plug in the supplied cable [A] into the Powerlet socket and the other end into the Garmin*.

*The Garmin GPS is not supplied with this mounting kit.