


**Fits: Garmin\* Nuvi 300,310,350,360,660**

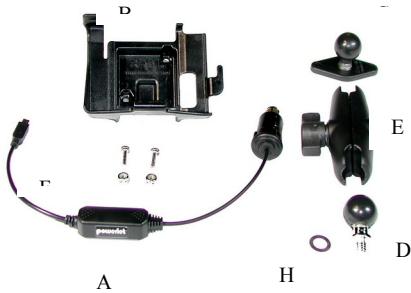

**PARTS LIST:**

- A. 12" Powerlet/Garmin Cable
- B. Cradle For Garmin
- C. Diamond Base w/ Ball
- D. 1" Ball w/ 3/8" Thread
- E. Double Socket Arm For 1" Ball
- F. Two Bolts
- G. Two Nuts
- H. Fiber Washer


**Introduction:**

Made in USA

This easy to install, high quality, kit provides a convenient way to mount and power a Garmin GPS\* on your motorcycle.


**Installation Instructions:**

**STEP #1** – Remove the mounting hole cover on the Powerbar and install the ball into the 3/8" hole [D]. Using the double socket arm [E], tighten the 1" ball into the Powerbar.

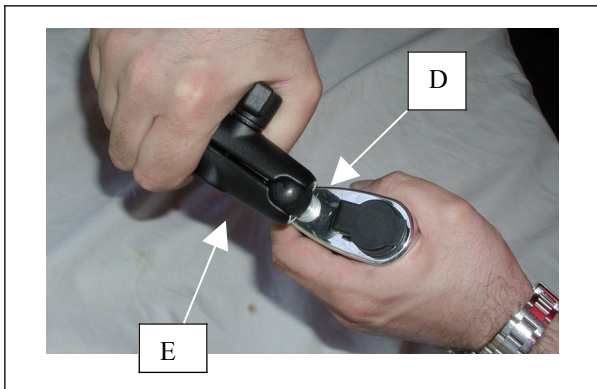

**STEP #2** – Attach the diamond base ball mount [C] to the back of the Garmin cradle using the supplied screws & nuts [F & G].

**STEP #3** – Loosen the arm enough to slip over both balls [C & D] and position the Garmin cradle.

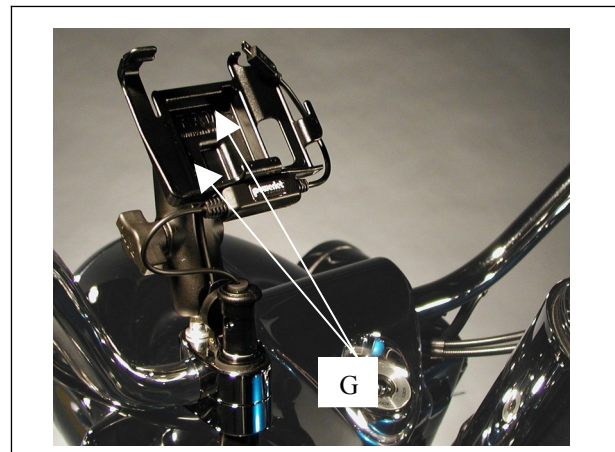

**STEP #4** – Plug in the supplied cable [A] into the Powerlet socket and the other end into the Garmin\*. Attach the regulator to the Garmin cradle via double stick tape.

\*The Garmin GPS is not supplied with this mounting kit.