

Aprilia Futura Panel Kit Installation Instructions

PKT-008



Introduction:

This easy to install, high quality, Powerlet™ kit provides a convenient way to access the battery on Aprilia Futura motorcycles. The operator can supply power to the battery (i.e. battery charger), draw power from the battery (i.e. heated vest), or monitor the state of charge on the battery using the Powerlet socket.

Made in USA

STEP #3 – Mount the socket into the panel; put a dab of Silicone on the socket and jam nut after assembly.

Parts List:

- 1 – PSO-001 Socket

Special Tools Needed:

1. 11/16 Hole Saw . Part #PMI-012

Please read all of the instructions carefully before attempting the installation of this product. Please have a trained professional install this kit if you are not familiar with these procedures.

Quick Start Instruction:

- STEP #1** Locate the white connector under the panel.
- STEP #2** Drill the panel to accept the socket
- STEP #3** Mount the socket into the panel
- STEP #4** Attach the connector to the socket and test


Detailed Instruction:

STEP #1 – Locate the white T connector under the left panel.



STEP #4 – Attach the connector to the socket and test the socket for power.

The center terminal is plus and the outer ring is negative (see dwg below). Apply either dielectric grease or Vaseline to the terminal. Use a voltmeter to check if the polarity is correct.

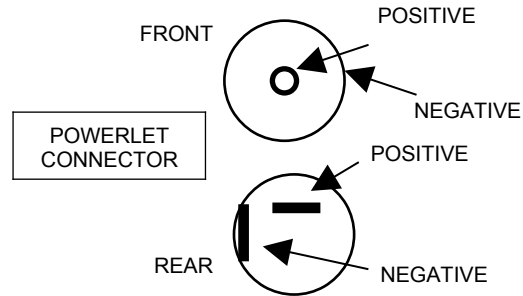

STEP #2 – Drill the panel to accept the socket. The proper tool for this is a 11/16" hole saw available on our website. **Part #PMI-012**

STEP #6 – Enjoy and ride safe.