

# Harley Mid Kit Installation Instructions

## PKT-026



### Introduction:

Made in USA

This easy to install, high quality, Powerlet™ kit provides a convenient way to access the battery on Harley-Davidson\* motorcycles. The operator can supply power to the battery (i.e. battery charger), draw power from the battery (i.e. heated garments), or monitor the state of charge on the battery using the Powerlet socket.



### Parts List:

- 1 - Wiring harness w/ 15A fuse
- 1 - Mounting bracket w/ socket
- 1 - Rubber washer
- 1 - Chrome washer
- Ty-wrap(s)

**Please read all of the instructions carefully before attempting the installation of this product. Please have a trained professional install this kit if you are unfamiliar with these procedures.**

### Quick Start Instruction:

1. Remove seat.
2. Route wires starting at the battery end and finishing at the bracket.
3. Connect the harness to the lead coming from the socket.
4. Mount the bracket on the horn bracket located under the gas tank.
5. Fasten ty-wraps.
6. Put everything you took off back on.

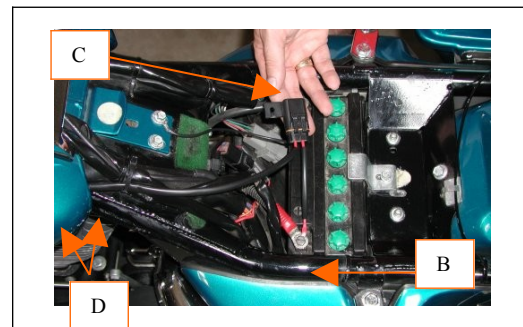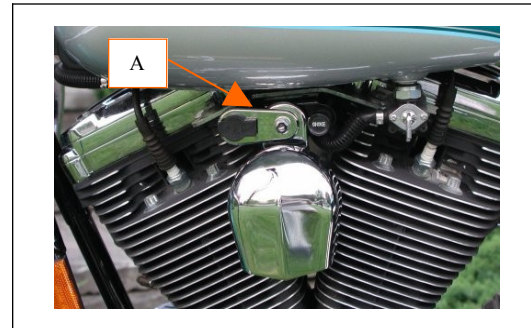

**STEP #3** – Finish routing the wire under the tank and up to the horn bracket. Install the fuse in the fuse-holder. Plug the two white t-connectors together. Use a voltmeter to check if the polarity is correct.

**STEP #4** – On the left side of the bike, under the gas tank, locate the horn and bracket. Remove the acorn nut from the bracket [A]. Attach the Powerlet bracket toward the front of the bike utilizing the supplied chrome & rubber washers. Adjust the bracket so it is aligned. Tighten to 8 Nm.

**STEP #5** - Apply the three ty-wraps. Use one to secure the fuse-holder and the other near point [D] and the third near the socket. **Do NOT allow the harness to directly contact the motor or exhaust.**

**STEP #6** –Replace the seat. Enjoy!

### Detailed Instruction:

**STEP #1** –Remove the seat exposing the battery. See the owner's manual.

**STEP #2** – Remove negative battery lead. Remove the positive battery lead and attach the red wire [B]. Attach the black wire to the negative battery post [C]. Run the wires below the gas tank by passing through the gap between the frame & gas tank [D].

### SPECIAL INSTRUCTIONS FOR V ROD INSTALLATION

On the Harley Davidson V Rod the POWERLET bracket must be placed behind the horn bracket.

\* Powerlet products are designed to be installed and/or used on Harley-Davidson motorcycles. "Harley-Davidson" is a registered trademark of Harley-Davidson Inc.,