

**Introduction:**

Made in USA

This easy to install, high quality, Powerlet™ kit provides a convenient way to access the battery on Ghezzi-Brian motorcycles. The operator can supply power to the battery (i.e. battery charger), draw power from the battery (i.e. heated vest), or monitor the state of charge on the battery using the Powerlet socket.



**Parts List:**

- 1 - Wiring harness w/ 7.5A fuse (15 Amp Max)
- 1 - Mounting bracket w/ socket
- Ty-wrap(s)


Please read all of the instructions carefully before attempting the installation of this product.

**Quick Start Instruction:**

- STEP #1** Remove seat, & gas tank cover.
- STEP #2** Mount the bracket.
- STEP #3** Route wires starting at the battery end and finishing at the bracket.
- STEP #4** Fasten ty-wraps.
- STEP #5** Connect the wires to the socket.
- STEP #6** Put everything you took off back on.

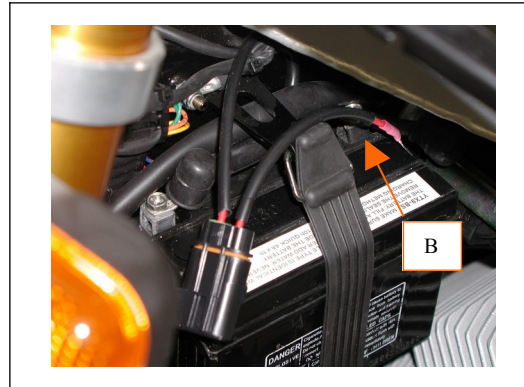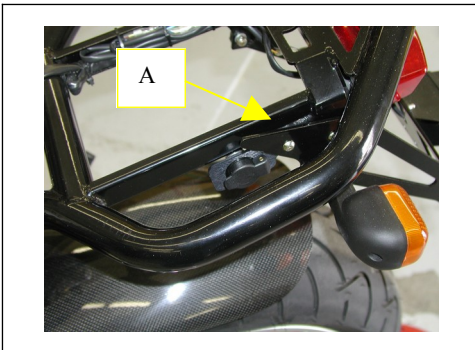

**STEP #4** - Apply the ty-wraps. One should be used to secure the fuse block. Do NOT allow the harness to directly contact the motor or exhaust.

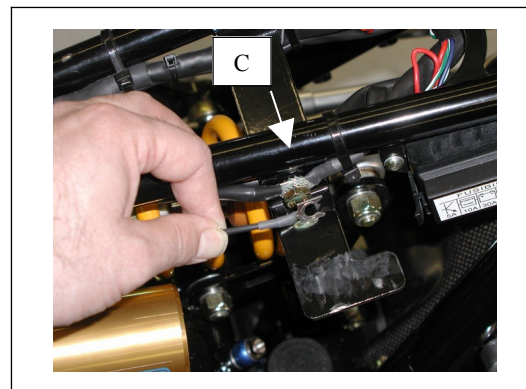


**STEP #5** – The center terminal is plus and the outer ring is negative (see dwg below). Apply either dielectric grease or Vaseline to the spade terminals. Connect the red wire to the positive spade terminal & the black wire to the negative terminal. Install the fuse. Use a voltmeter to check if the polarity is correct.

**Detailed Instruction:**

**STEP #1** –Remove the seat & Gas tank cover. See the owner’s manual.

**STEP #2** – Attach the Powerlet bracket between the tail frame rail & the license plate bracket [A]. The bracket replaces the stock rubber spacer. Adjust the bracket so it is aligned. Tighten the screw.

**STEP #3** – Remove negative battery lead. Remove the positive battery lead and attach the red wire [B]. Run the wires under the gas tank and through the frame members by passing through the gap between the front & tail frame sections. Attach the red wire to the positive battery post. Attach the black wire to the ground bolt [C]. Re-attach the negative battery lead.

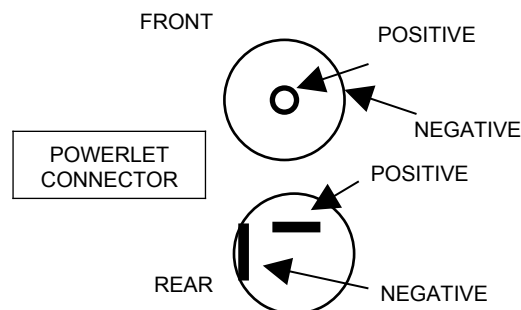

**STEP #6** –Replace the seat & tank. Enjoy!