

Triumph Rocket III Panel Kit PKT-066



Introduction:

This easy to install, high quality, Powerlet™ kit provides a convenient way to access the battery on Triumph Rocket III motorcycles. The operator can supply power to the battery (i.e. battery charger), draw power from the battery (i.e. heated vest), or monitor the state of charge on the battery using the Powerlet socket.

Made in USA

Parts List:

- 1 - PSO-001 Socket


Please read all of the instructions carefully before attempting the installation of this product. Please have a trained professional install this kit if you are not familiar with these procedures.

Quick Start Instruction:

- STEP #1 Remove the left side panel.
- STEP #2 Remove the knock out for the socket.
- STEP #3 Mount the socket into the panel
- STEP #4 Attach the connector to the socket and test.
- STEP #5 Put side panel back on.

Detailed Instruction:

STEP #1 – Remove the panel located below the gas tank on the left side. This is removed using a T30 Torx bit.

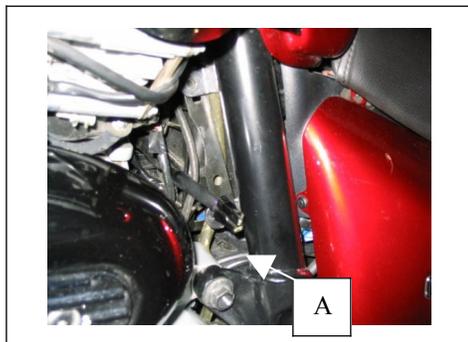

STEP #2 – Remove the knock out .


STEP #3 – Mount the socket into the panel; put a dab of Silicone on the socket and jam nut after assembly.

Important: Do NOT use Loctite or over-tighten



STEP #4 – Locate the plug for the socket which is taped to the harness with blue tape in the 1st photo fig.A. Attach the connector to the socket and test the socket for power.

STEP #5 – Remount the side panel. The center terminal is plus and the outer ring is negative (see dwg below). Apply either dielectric grease or Vaseline to the terminal. Use a voltmeter to check if the polarity is correct.

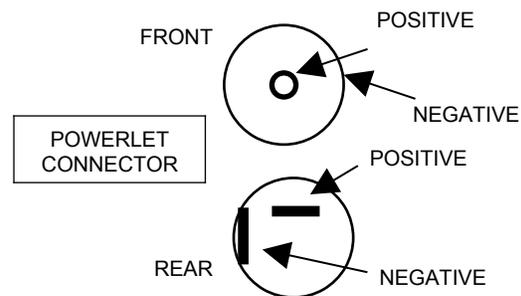

STEP #6 – Replace the panel. Enjoy!